

LTL-X Fuses – Use and Replacement

Fuses


Two fuses are located in the battery compartment. The charging fuse protects the battery against short circuit and other errors in the charging connector, charger or charging system. The battery fuse protects the battery and electronics against short circuit and other errors in the electronic system.

Replacement

Always replace a blown fuse with one of equal rating.

Charger fuse (5*20 mm).....	T3.15A
Power supply fuse (5*20 mm).....	T3.15A

To change the fuses you need access to the battery compartment (see the battery section instruction).

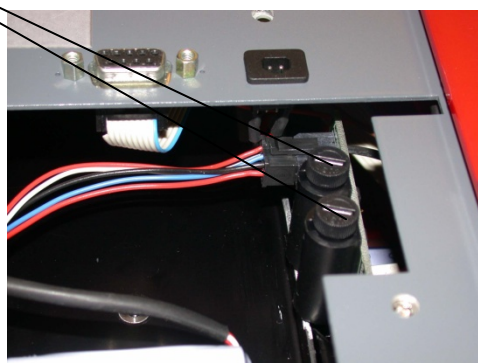

Carefully unscrew the plastic cap fuse holder by using e.g. a coin. Pull out the fuse from the cap and insert the new one and reassemble