


LTL-XL Fuses – Use and Replacement

Two fuses are located in the battery compartment.

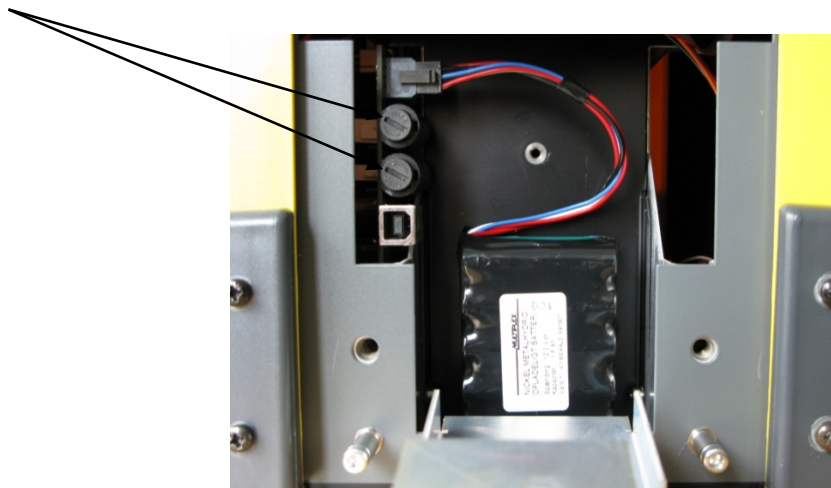

The charging fuse protects the battery against short circuit and other errors in the charging connector, charger or charging system. The battery fuse protects the battery and electronics against short circuit and other errors in the electronic system.

Always replace a blown fuse with one of equal rating

Charger fuse (5*20 mm)	T3.15A
Power supply fuse (5*20 mm)	T3.15A

To replace the fuses you need access to the battery compartment at the low end of the rear of the tower. Remove the screws from the back cover and remove the cover. Carefully unscrew the plastic cap fuse holder by using e.g. a coin. Pull out the fuse from the cap and insert the new one and reassemble