

LTL-X Mark II, fuses

Two fuses are located in the battery compartment. The **charger fuse** protects the battery against short circuit and other errors in the charging connector, charger or charging system.

The **main fuse** protects the battery and electronics against short circuit and other errors in the electronic system. If the main fuse is removed no power will be drawn from the battery.

Always replace a blown fuse with one of equal rating **See Electrical Characteristics pg.48 in user manual.** To change the fuses you need access to the battery compartment. **See replacing battery pg. 38 in user manual.** Carefully unscrew the plastic cap fuse holder. Pull out the fuse from the cap and insert the new one and reassemble

